


Adapter Set for ST Microelectronics ST10F25x with TQFP-100 Yamaichi-Socket
 Adapter Set Yamaichi-0.50 ST10F25x QC144-TQFP100
 Part No. DZS-F25x-T100-Y

Top Connection : QC144 for DProbeST10


Bottom Connection : TQFP-100 Yamaichi Socket

IC 149-100-025-B5 (recommended)

Side view:

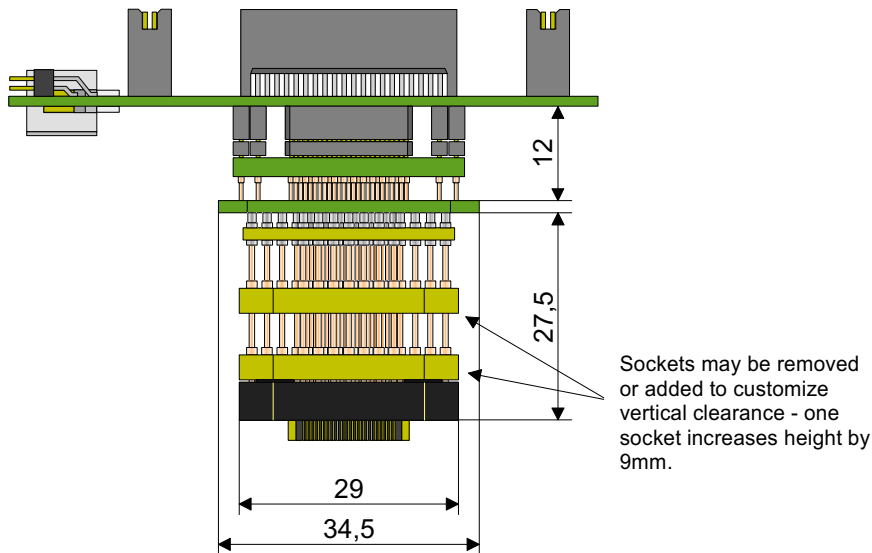

Configurator Top view:

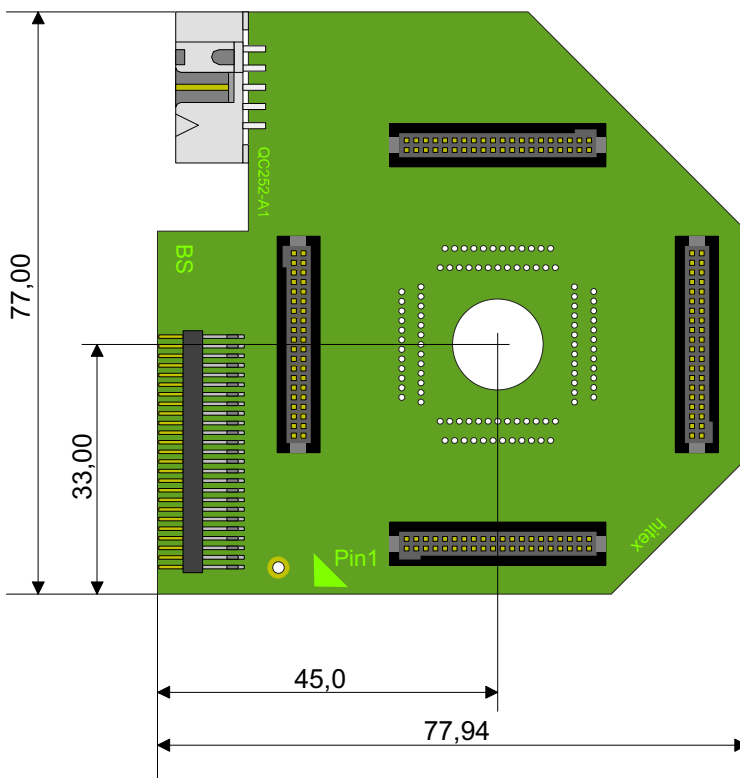

Note: For proper contact and processing the Yamaichi Socket requires a slightly bigger footprint than the original CPU and four solder pads at the corners of the socket as a mechanical support (refer to the Yamaichi Datasheet). As a substitute for the solder pads the socket may be stabilized with an adequate two-component glue.